

LIFE SAFETY  $\mathscr{G}^{\circ}$  incident management

## FireShield Plus Conventional Fire Alarm Control Panels







#### (**b**) (**b**) (**b**) (**b**) (**b**) (**b**) (**b**)

## Overview

The FireShield Plus fire alarm family consists of 5 and 10 zone conventional fire alarm control panels, an integrated DACT/Dialer, serial annunciator modules, and serial remote relay modules. All of these components are microprocessor-controlled. The FireShield Plus family is ideal for both new and retrofit installations alike.

FireShield Plus incorporates features designed to simplify installation, operation and maintenance. These include front panel programming, one person walk testing, and selectable IDC and NAC types. In addition, when used with EDWARDS *CleanMe*<sup>®</sup>-compatible smoke detectors, FireShield Plus provides analog type features such as remote maintenance alert and automatic drift compensation that reduce false alarms and simplify maintenance calls.

FSP502 and FSP1004 panels support Class A operation by combining pairs of on-board initiating curcuits (IDCs) or notification circuits (NACs) to provide the necessary Class A circuits. For example, the FSP1004 comes factory set to support 10 Class B IDCs and four NACs. But it can be field-configured to provide five Class A IDCs, no Class B IDCs, and two Class A NACs – or any other combination of circuits that fall within the circuit-pairing parameters.

	FSP1004	FSP502
Class B IDCs	Up to 10	Up to 5
Class A IDCs	Up to 5	Up to 2
Class B NACs	Up to 4	Up to 2
Class A NACs	Up to 2	1
NAC Power	3.5 amps*	3.5 amps
Auxiliary power	0.5 amps	0.5 amps

**Note:** Class A operation will reduce the number of available Class B IDCs and/or NACs, depending on the panel configuration. See Specifications on page 5 for details.

\*Expandable to 7.0 amps

## Standard Features

- Available in 5 and 10 IDC models
- IDC or NAC pairs convertible to single Class A circuits (10 and 5 IDC panels only)
- CleanMe<sup>®</sup> provides remote annunciation if a detector drifts out of UL/ULC limits reducing the chance of a false alarm
- Combination Waterflow and Supervisory IDCs reduces wire and zone counts
- NACs programmable by zone and individually selectable for Genesis, continuous, temporal outputs, or coded
- Front panel programmable simplifies installation and servicing
- Optional fully integrated DACT/Dialer for PC programming
- Genesis option allows precision synchronization and audible silence over two wires without additional modules
- On-board relays for Alarm, Supervisory and Trouble
- Optional serial bus relay modules are programmable for common or zone activation
- Optional serial bus remote annunciator family
- One person walk-test (audible or silent)
- Expandable power supply on 10 IDC panel reduces booster power costs
- Trim ring available for semi-flush mounting
- Supports 2M, "EC", 6200, 400, 500 and 700 series detectors

## Application

FireShield Plus provides smoke and fire detection, occupant notification and off-premises signaling for small- to medium-sized buildings.

Each IDC can be configured for either Class B or Class A operation and one of eight operating modes:

- Alarm –with or without smoke detector verification including discrimination of contact devices
- Waterflow Alarm;
- Waterflow Alarm/Supervisory (Combination IDC);
- Supervisory (Latching/non-latching);
- Monitor (non alarm or supervisory)
- Signal Silence
- Drill
- Cross zoning

NACs may also be configured for either Class B or Class A operation. Additionally, NACs can be individually configured for one of six outputs. These are Genesis, Genesis (A/V silenceable), Continuous, Temporal, Coded, and City Tie. The Genesis selection allows independent horn control over two wires and provides precision synchronization for Genesis devices, all without the need for a Genesis Signal Master accessory.

When configured for Genesis notification appliances, FireShield Plus's Alarm Silence function will silence connected Genesis audible appliances but Genesis strobes will remain active until the panel is reset. When Genesis Mode is selected, both the horns and strobes on Genesis and Enhanced Integrity notification appliances will be synchronized across all NACs.

Note: zones may be selected for either latching or non-latching operation.

## Detectors with intelligent features at a conventional price

When combined with ED-WARDS *CleanMe®* -compatible smoke detectors, FireShield Plus provides intelligent features at a conventional price. If a *CleanMe®* detector drifts out of the UL/ULC sensitivity range, EDWARDS's patented remote maintenance reporting sends an alert to the FireShield Plus control panel. This feature reduces the chance of a false alarm and



simplifies service calls. In addition, *CleanMe*<sup>®</sup>-compatible smoke detectors have built-in drift compensation that extends the time between cleanings. If cleaning is ever necessary, it is literally a snap with EDWARDS's exclusive replaceable optical chamber.

## Panel LED Display

The following system LEDs display the panel's status:

- Alarm panel is in the alarm state;
- Trouble panel is in the trouble state;
- Supervisory panel is in the supervisory state;
- *Power* indicates the status of the AC power source;
- *Disable* indicates when any IDC, NAC, relay or the DACT is disabled;
- Annunciator Trouble indicates trouble on the remote annunciator bus;
- Battery Trouble indicates battery or charging problems;
- Ground Fault indicates a short between any panel circuit and ground;
- *Walk Test* indicates that one or more IDCs are in the walk test mode;
- *Alarms Silenced* indicates that the panel is in the alarm state with one or more NACs silenced.
- *Waterflow* indicates that one or more circuits have detected an active waterflow switch.
- Service Detector indicates the presence of a dirty detector.
- *Remote Disconnect* indicates off site communication has been disabled.

Each IDC has a disable switch and three LEDs:

- Alarm red indicates that the IDC is in the alarm state;
- Trouble *yellow* indicates that the IDC is in the trouble state or is disabled (when flashing);
- Supervisory/Monitor *yellow* indicates that the IDC is in the supervisory state or the monitor state (when flashing).


Each NAC also has a disable switch and a trouble/disable LED.

#### Status indication with the DACT/Dialer installed

The dialer's LCD display provides two lines x 16 characters of text. For programming, the top line displays the programming step and the lower line displays the selected option. All system events are displayed on the LCD with custom zone messages. During normal operation, the LCD will display any off-normal condition present in the panel.

## IP and Cellular Communications

Several popular third-party IP/Cellular communicators have been tested with the FSP conventional control panels and are compatibility listed to UL864. The IP/Cellular communicators meet NFPA72 2013 edition requirements for sole or secondary transmission paths. Using IP/Cellular communicators can reduce the cost of ownership by eliminating POTS lines. Please see the FSP conventional control panel compatibility documentation part number 3101019-EN for a full list of compatible communicators.

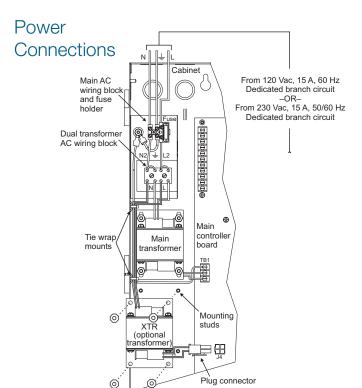

## Options

#### **Off-premise communication**

A fully integrated FireShield Plus DACT/dialer is available for reporting events to a monitoring facility. The DACT also supports uploading or downloading of system configuration, status and event history. The DACT is programmable for either single or dual line operation. It also supports split and dual reporting for two digital alarm receivers.

The DACT brings additional features to the panel including a 32-character alphanumeric LCD display, local or remote PC programming and an event history log.

#### **Remote Annunciators and Relays**


The serial bus standard on all FireShield Plus models is another installation time-saver. This circuit allows the connection of Remote System Indicators (FSRSI), Remote Zone Indicators (FSRZI-A, FSRZI-SA) and Remote Relay Modules (FSRRM24) over a four-wire (data and power) circuit. Annunciator and relay modules can be installed up to 1,000 feet from the panel on 18-gauge wire.

Modules are also available for City Tie (CTM) and Reverse Polarity (RPM) connections.

## DACT/Dialer



The DACT/Dialer installs behind the front panel display.

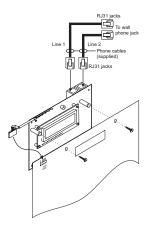

Note: All panel versions are available with factory installed DACT. See order table for ordering information.

The optional DACT/Dialer is a multifunction module that provides communications, modem capability, and LCD display functions. Its primary function is as a Digital Alarm Communicator Transmitter (DACT). As a DACT, it transmits event messages to a Digital Alarm Communicator Receiver (DACR) at a monitoring facility. The monitoring facility then notifies the fire department and other responsible parties of the event. Programmable options include single or dual line operation, and split or dual reporting to two DACRs.

The DACT module can also be used as a modem to connect the panel to both local and remote computers for uploading and downloading of configuration data (programming), panel status and event history. For security, the modem can be configured to accept programming on incoming calls or it can be required to call a preprogrammed number before accepting downloads and sending uploads.


The DACT module can be configured to work as all of the above, or as only an LCD display or LCD display and modem.

## Remote Relay Module

1844	12	31+0		10
100		311	6	10
and the second second			0	
1.00			121	10
100.0-0	12			101
Trans.				121
CONTRACT OF	- <u>Le</u>	1.1440		10
1.00	10			10

The Remote Relay Module mounts on a plastic track inside an MFC-A cabinet.

Snap track	Up to 4 RRM24s can be mounted in an FSRRM-S11 snap track. Up to two FSRRM-S11s can be mounted in an MFC-A.

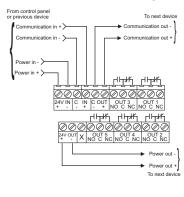

The Remote Relay Module (FSRRM24) is one component of the system that sets FireShield Plus apart from other panels in its class. This module has five Form C relays rated at 1 amp each. It can be configured to function in either a zone relay mode or a common system mode.

When configured in the zone relay mode, relays energize when the associated IDC is active. The module can be configured for activation by IDCs 1 through 5 or IDCs 6 through 10. One relay is automatically associated with each IDC.

When configured in the common system mode, relays energize or de-


energize when the panel changes state. One relay is available for each of the following functions: Alarm, Supervisory, Trouble, Power Loss, Monitor.

The FSRRM24 mounts on a plastic snap track and can be installed in an MFC-A or other listed fire alarm enclosure. The panel will support two RRMs of each configuration for a total of six on the 10-zone panel.

## **Remote Annunciators**

÷	9	÷
POWER	•	u
SUP TBL	°	
	-	-
	-	-

The FireShield Plus family has several remote annunciation options. The serial remote annunciator bus can be run up to 1000 feet (305 m) on untwisted non-shielded 18-gauge cable. Serial annunciator models round out the family to provide a range of features and functions. As many as three annunciator modules may be mounted in a standard electrical box, sharing an attractive trim plate that blends with any decor.

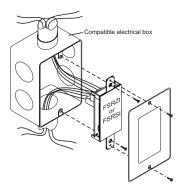

The FSRSI can be installed alone or with one or more FSRZIs. The FSRSI and FSRZI-A require trim plates (ordered separately). These are available in one, two or three gang models. Each panel will support two FSRSIs.



Communication in

ower in +


tion in + 🖒

## Remote System Indicator (FSRSI)

The FSRSI is ideal for common system annunciation. It includes five LEDs and a local silence/lamp test switch. The LEDs indicate power status, alarm, supervisory, trouble and ground fault. The silence switch will silence the onboard trouble buzzer if active. The switch can also be used to initiate a lamp test of the LEDs on all connected FSRSIs and FSRZIs.





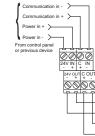

#### Remote Zone Indicator (FSRZI-A)


The FSRZI-A is used to indicate zones in the alarm state. It contains five red LEDs. Depending on the jumper setting selected, the LEDs will indicate either

IDCs 1 through 5 or IDCs 6 through 10. The panel can

support two modules programmed for each selection.

Power out

# F (F

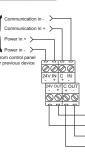

#### Remote Zone Indicator (FSRZI-SA)

Com

The FSRZI-SA is used to indicate zones in the alarm or supervisory state. It contains five bi-color LEDs. Depending on the jumper setting selected, the LEDs will indicate either IDCs 1 through 5 or IDCs 6 through 10. The panel supports two modules programmed for each selection, and can be jumper selected to provide Alarm or Supervisory indications


#### FSRA10, FSRA10C Remote LED annunciators

The FSRA10 is a remote annunciator with capacity for up to ten zones. It includes ten bi-color LEDs (red/yellow) for indicating active zones, and ten yellow LEDs for indicating zone troubles. The (C) option adds common control switches. Both versions mount to standard North American 4-inch square electrical boxes. A surface box is also available.




#### FSUIM Graphic Driver/Interface

The FSUIM is a universal interface module that can be used by FireShield to drive graphic annunciators. It also allows FireShield control panels to control, or be controlled by, other control panels. The FSUIM provides five supervised switch inputs and nine dry contact relay outputs. Nine LEDs provide visual confirmation when each relay is energized. The FSUIM is shipped with a plastic snap track for mounting in an MFC-A cabinet or other listed fire alarm enclosure.

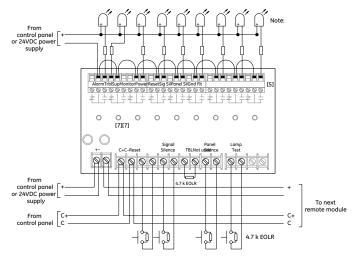

#### FSRA10, FSRA10C Wiring

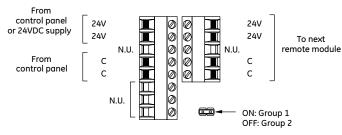

## Remote Annunciator Specifications

G	er	e	a	

Agency Listings	UL864 (S3000), ULC-S527, CSFM, FDNY

Remote Annunciators	FSRSI Remote System Indicator	FSRZI-A/FSRZI-SA Remote Zone Indicator				
Maximum per System	All panels: 2	10 zone panel: 4 5 zone panel: 2				
Current Requirements	Standby: 17 mA Alarm: 56 mA	Standby: 8 mA Alarm 76 mA				
Voltage Range	Minimum: 18.8 Vda	Minimum: 18.8 Vdc; Maximum: 27.3 Vdc				
Maximum Circuit Capacitance	0.	0.03 µF				
Maximum Circuit Resistance	13	13 Ohms				
Wire Size	18 - 12 AWG (0.	18 - 12 AWG (0.75 mm <sup>2</sup> - 2.5 mm <sup>2</sup> )				
Mounting	ANSI/NEMA OS1-199	ANSI/NEMA OS1-1996 1-3 gang electrical box				
Operating Environment	Temperature: 32 - 120° F (0 - 49° C	Temperature: 32 - 120° F (0 - 49° C); Humidity: 93% RH, non-condensing				

Remote Relay Module – FSRRM24	Configured for Zone Mode	Configured for Common Mode			
Maximum per system	10 zone panel: 4; 5 zone panel: 2 All panels: 2				
Current Requirements	Standby: 10 mA; Alarm: 70 mA Standby: 26 mA; Alarm: 70 mA				
Voltage Range	Minimum: 18.8 Vdc;	Maximum: 27.3 Vdc			
Contact Rating	1 A @ 5	30 Vdc			
Maximum Circuit Capacitance	0.03 µF				
Maximum Circuit Resistance	13 Ohms				
Wire Size	18 - 12 AWG (0.75 mm <sup>2</sup> - 2.5 mm <sup>2</sup> )				
		FSRRM24 mounts in plastic track (included) or up to four FSRRM24s in an FSRRM-S11			
Mounting	11" track ordered separately. FSRRM24s should	be installed in an MFC-A or other listed fire alarm			
	enclosure.				
Operating Environment	Temperature: 32 - 120° F (0 - 49° C);	Humidity: 93% RH, non-condensing			
Dimensions	2-3/4" W x 3-3/8" H x 1-1/2" D (65.9 mm W x 85.7 mm H x 38.1 mm D)				

F-Series Remote Annunciators	FSRA10	FSRA10C					
Compatibility	10-Zone Panels only						
Common Controls	No	Yes					
Dimensions	5-5/8" x 8½" x 1 ½" in (14	5-5/8" x 8½" x 1 ½" in (14.3 cm x 21.4 cm x 3.8 cm)					
Mounting	North American 4-inch square e	electrical box or listed enclosure					
Power Wiring	18 to 12 AWG (0.1	75 to 2.50 sq mm)					
Data Wiring	18 to 12 AWG (0.75 to 2.50 sq mm) to	wisted pair (6 twists per foot minimum)					
	18.8 to 2	27.3 Vdc					
Operating voltage	Supply must be UL/ULC listed for	r fire protective signaling systems.					
	Do not use FACP accessory power outputs	that are interrupted when the panel is reset.					
Standby current	17	mA					
Alarm current	98 mA						
Operating environment	Temperature: 32 to 120 °F (0 to 49 °C); Humidity: 0 to 93% RH, noncondensing at 90 °F (32 °C)						
FSUIM Universal Input Module							
Mounting	MFC-A cabinet or liste	ed fire alarm enclosure					
Wire size	12 to 18 AWG (0.	75 to 2.5 sq mm)					
Operating voltage	21.2 to 2	27.3 Vdc					
Circuit capacitance	0.03 µ	F, max.					
Circuit resistance	13 ohm	is, max.					
Switch inputs	Quantity: 5 End-of-line	resistor: 4.7 k ohms ½ W					
Relay outputs	Quantity: 9 Type: Co	mmon Style: Form C					
Contact rating	30 Vdc at 1 A	(resistive load)					
Standby Curent	53	mA					
Alarm Current	114	mA					
Operating environment	Temperature: 0 to 49 °C (32 to 120 °F); Humidity: 0 to 93% RH, noncondensing at 32 °C (90 °F)						

## **Control Panel Specifications**

Control Panels				FSP	1004				FSP502	
Initiating Device Circuits – IDCs	Class B	10	8	6	4	2	0	5	3	1
(Available combinations shown at right)	Class A	0	1	2	3	4	5	0	1	2
Notification Appliance Circuits – NACs	Class B	4	2	2		0		2	0	
(Available combinations shown at right)	Class A	0	1	1		2		0	1	
Power Supply			4.25 a	imps expan	dable to 7.5	amps		4.	25 amps to	tal
NAC Voltage Rating						24 Vfwr				
Maximum NAC current				amps each, mps w/ opt					.0 amps ead .5 amps tot	
AC Input 120 Vac	c 60 Hz		2.2 a	.mps w/ opt	ional transfe	ormer			1.25 amps	
230 Vac 50/60Hz			1.1 a	mps w/ opt	ional transf	ormer			0.6 amps	
Base Panel Current Draw Star	ndby			128	mA			104 mA		
-	larm			242	mA			224 mA		
Panel Battery Charge Capacity			Lin to two	o 24 Ah batte	eries 18 Ah	in cabinet		Up to 24 Ah, 10 Ah max in		
(sealed lead acid only)		Up to two 24 Ah batteries, 18 Ah in cabinet cabinet								
Auxiliary Current				0.5 amp			nmed as re	settable.		
Auxiliary Output						Vdc regula				
IDC Alarm Current		3.0 mA		etector com						r circuit)
IDC Circuit			Maximur	m loop resis		,		apacitance	: 0.03 µF	
IDC Operating Voltage					1(	6.9 to 29 Vo	dc			
UL Detector ID						100				
Alarm Contact (normally open Form C)						@ 1 A (resis	· · · ·			
Trouble Contact (Form C)						@ 1 A (resis	/			
Supervisory Contact (normally open Form	n C)					@ 1 A (resis	· · · ·			
Operating Environment			Temperati	ure: 32 - 12		· · · · · · · · · · · · · · · · · · ·	-		ondensing	
Terminals (wire gauge)							<sup>12</sup> - 2.5 mm <sup>2</sup>			
Asynchronous Serial Communications			Ma	ximum resis					3 µF	
Agency Listings					JL864 (S30	000), ULC-S	527, CSFN	1		

\* If larger batteries are required, use an external battery cabinet.


#### DACT – F-DACT (mounts in panel)

Receivers	Supports two receivers with two phone numbers each
Communications Protocol	Contact ID (SIA DC-05), 4/2 (SIA DC-02 P3)
Programming	Front panel controls or PC with appropriate software
Telephone line connection	Two RJ31X (plug-to-plug) cords supplied with DACT
Telephone lines	Two or one loop start lines on the public switched telephone network. Pulse or DTMF.
Telephone wall connector	RJ31X/CA31X equiv. or RJ38X/CA38X equiv.
Communications Compliance	Industry Canada CS-03; FCC/CFR 47 Parts 15 & 68; NFPA 72; UL 864; ULC S527
Operating Environment	Temperature: 32-120° F (0-49° C); Humidity: 93% RH, non-condensing
Current requirements	Standby: 65 mA; Alarm: 107 mA
Agency Listings	UL864 (S3000), ULC-S527, CSFM

## Dimensions

Model	D1*	D2	D3	<b>D</b> 4	D5*
Five-zone	19.5 in (49.5 cm)	3.75 in (9.5 cm)	9.13 in (23.2 cm)	10.5 in (26.67 cm)	14.23 in (36.14 cm)
Ten-zone	30 in (76.2 cm)	3.75 in (9.5 cm)	7.75 in (19.7 cm)	21.27 in (54.0 cm)	15.0 in (38.1 cm)

\*Add 11/2 inches (3.81 cm) to D1 and D5 dimensions for trim kit.

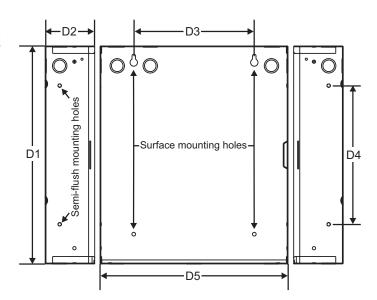

## Ordering Information

Part Number	Description	Ship Wt. lb. (kg.)
Control Panels	S	
FSP1004*	Conventional Fire Alarm Control Panel – 10 Class B IDCs and 4 Class B NACs (Pairs of IDCs and NACs convertible to single Class A circuits), 120 Vac	30.5 (13.8)
FSP1004-2	Conventional Fire Alarm Control Panel – 10 Class B IDCs and 4 Class B NACs (Pairs of IDCs and NACs convertible to single Class A circuits), 230 Vac. Grey cabinet.	30.5 (13.8)
FSP502*	Conventional Fire Alarm Control Panel – 5 Class B IDCs and 2 Class B NACs (Pairs of IDCs and NACs convertible to single Class A circuits), 120 Vac	18.5 (8.4)
FSP502-2	Conventional Fire Alarm Control Panel – 5 Class B IDCs and 2 Class B NACs (Pairs of IDCs and NACs convertible to single Class A circuits), 230 Vac. Grey cabinet.	18.5 (8.4)
F-TRIM35*	Semi-flush trim ring for FSP302 and FSP502	1.7 (0.8)
F-TRIM10*	Semi-flush trim ring for FSP1004	2.2 (1.0)

\* Insert "G" for Gray cabinet or "R" for Red cabinet. Insert "F" for French language (grey cabinets, not available on 220v versions). Insert "GD" or "RD" for red and gray cabinets with dialer installed.

#### **Related Items**

Expander Transformer, 120 Vac - For FSP1004* only	4.0 (1.8)
Expander Transformer, 230 Vac - For FSP1004*-2 only	4.0 (1.8)
Required UL listed End of Line Resistors – One 3.6K Ohm and one 1.1K Ohm. One required for each IDC configured as combination waterflow and supervisory.	0.1 (0.5)
Required ULC listed End of Line Resistor Plate - includes one 1.1K, 3.6K and 4.7K Ohm resistor	1.0 (0.5)
	Expander Transformer, 230 Vac - For FSP1004*-2 only Required UL listed End of Line Resistors – One 3.6K Ohm and one 1.1K Ohm. One required for each IDC configured as combination waterflow and supervisory.

#### Off Premises Communications

F-DACT	Digital Communicator/Modem/LCD module (Mounts in control panel)	1.0 (0.5)
F-DACT1	Digital Communicator/Modem/LCD module (Compatible with new v4.0 control panels)	
RPM	Reverse Polarity Module	3.0 (1.36)
CTM	City Tie Module (Requires 4" square or 2-gang North American electrical box)	1.0 (0.5)

#### **Remote Annunciation**

FSRSI	Remote System Indicator – Includes LEDs for display of Power, Alarm, Supervisory, Trouble and Ground Fault, trouble sounder and silence/lamp test switch. Single gang trim plate included, multi-gang plates ordered separately. Mounts in a single or multi-gang North American electrical box.	0.3 (0.1)
FSRZI-A	Remote Zone Indicator – Includes red LEDs for five IDCs. Single gang trim plate included, multi-gang plates ordered separately. Mounts in single or multi-gang North American electrical box.	0.3 (0.1)
FSRZI-SA	Remote Zone Indicator – Includes LEDs for five IDCs. Single gang trim plate included, multi-gang plates ordered separately. Mounts in single or multi-gang North American electrical box. Jumper selected Alarm (red) or Supervisory (amber) indications.	0.3 (0.1)
FSAT1	Annunciator Trim Plate, 1 gang	0.1 (0.05)
FSAT2	Annunciator Trim Plate, 2 gang	0.1 (0.05)
FSAT3	Annunciator Trim Plate, 3 gang	0.1 (0.05)
FSAT4	Annunciator Trim Plate, 4 gang	0.1 (0.05)
FSRA10	Single Unit 10 zone remote annunciator for FSP1004 – Insert "F" after p/n for French language option	
FSRA10C	Single Unit 10 zone remote annunciator for FSP1004 (with common controls) – Insert "F" after p/n for French language option	
FSUIM	Common Function Graphic Driver/Interface - 9 relays and 5 switch inputs for common system indicators and controls	

Remote Relay Module		
FSRRM24	Remote Relay Module – Five Form C relays. Configurable for IDCs 1-5, or 6-10, or common system indications. Requires MFC-A or other listed fire alarm enclosure.	0.4 (0.2)
FSRRM-S11	11" Mounting track. Holds up to 4 FSRRM24s.	0.4 (0.2)

more...



#### LIFE SAFETY & INCIDENT MANAGEMENT

#### Contact us...

Email: edwards.fire@fs.utc.com Web: edwards-fire.com

1016 Corporate Park Drive Mebane, NC 27302

EDWARDS is a registered mark in the United States and other countries.

 $\ensuremath{\mathbb{O}}$  2018 United Technologies Corporation. All rights reserved.

### Accessories

Part Number	Description	Ship Wt. Ib. (kg.)
Cabinets		
MFC-A	Multi-function Cabinet (fire alarm accessory enclosure)	7.0 (3.2)
Batteries		
12V4A	4.5 Ah Sealed Lead Acid Battery - 12 Vdc (2 required)	5 (2.27)
12V6A5	7.2 Ah Sealed Lead Acid Battery - 12 Vdc (2 required)	6 (2.72)
12V10A	11 Ah Sealed Lead Acid Battery - 12 Vdc (2 required)	10 (4.45)
12V17A	18 Ah Sealed Lead Acid Battery - 12 Vdc (2 required)	13 (5.90)
12V24A	26 Ah Sealed Lead Acid Battery - 12 Vdc (2 required)	20 (9.07)

#### **Programming Tools**

FA-CU Fire alarm configuration utility. This CU is available for download from the myEDDIE website only. Visit <u>https://myeddie.edwardsutcfs.com.</u>

