



CROSSFIRE Series

CROSSFIRE MONITOR TOP

XFT-NJ

2.5" M OUTLET

\$2071.00 List Price

FEATURES

can be connected to either a portable base or a truck with the adapters on page 72 or a TFT Extend-A-Gun with XL outlet on page 137. The connection is easy, positive, and visually verified. When in use, the release is "locked out" by water pressure. The waterway is a large 3.25" (83mm) which lets the CROSSFIRE deliver up to 1250 gpm (4750 l/min) with low friction loss. Horizontal rotation is securely locked with a simple lever, and position can be visually confirmed. Only seven (7) turns of the handwheel change the discharge elbow from vertical to the stop elevation. Includes highly visible pressure gauge and built-in automatic drain valve. Standard outlet thread is male 2.5" NH (65mm).

SPECIFICATIONS

| | |
|-----------------------------------|-------------------------|
| Coupling Size Side A | 2.5" (65 mm) |
| Coupling Size Side B | 2.5" (65 mm) |
| Coupling Style Side B | Male Threads |
| Finish | Fire Engine Red |
| Horizontal Control | Lock Lever |
| Horizontal Movementdegrees | Continuous 360 |
| Inlet | Quick Connect Female |
| Max Flow | 1,250 gpm (4,500 l/min) |
| Operation Energy Source | Manual |
| Oscillation | No |
| Outlet | 2.5" (65 mm) |
| Package | No |
| Safety Shutoff | No |
| Valve Design | No Valve |
| Vertical Control | 6" Handwheel |
| Vertical Movementdegrees | 90 to 90 |
| Weight | 17 |
| Safety Inlet | No |

DOCUMENTS

Service Procedures

[CROSSFIRE XF500-KIT & XP500-KIT INSTALLATION INSTRUCTIONS \(PDF\)](#)

[PARTS LIST: CROSSFIRE & SAFE-TAK 1250 \(PDF\)](#)

[PARTS LIST: CROSSFIRE & SAFE-TAK 1250 \(PDF\)](#)

Instructions For Installation, Safe Operation and Maintenance

[CROSSFIRE STORAGE BRACKET \(PDF\)](#)

[CROSSFIRE® MONITOR MANUAL \(PDF\)](#)

[MONITOR EXTENSION PIPE \(PDF\)](#)

[Z FRENCH MANUEL : CANON À EAU CROSSFIRE®](#)

[Z GERMAN CROSSFIRE® MONITOR MANUAL \(PDF\)](#)

[Z ITALIAN CROSSFIRE® MONITOR MANUAL \(PDF\)](#)

[Z POLISH CROSSFIRE® MONITOR MANUAL](#)

[Z SPANISH MONITOR CROSSFIRE \(PDF\)](#)

Product Brochures

[REALLY CAMPAIGN - CROSSFIRE PORTABLE MONITOR \(PDF\)](#)

Technical Specifications and Drawings

[MONITOR DRAWING AND PART LIST \(PDF\)](#)

[PARTS LIST: CROSSFIRE BRACKET \(PDF\)](#)

[XFT-NJ FINISHED GOOD PRINT \(PDF\)](#)

[XFT-NJ FINISHED GOOD PRINT \(ZIP\)](#)

[XFT-NJ ITEM SPECIFICATION \(DOC\)](#)

Online Videos

[CROSSFIRE CUP SEAL REPLACEMENT \(MP4\)](#)

[CROSSFIRE SERIES VIDEO \(MP4\)](#)

[HOW TO UPGRADE A STANDARD BLITZFIRE TO AN OSCILLATING BLITZFIRE \(MP4\)](#)

Technical Bulletins & Testing Reports

[CROSSFIRE® AND HURRICANE™ SHAFT SEAL CHANGE \(PDF\)](#)

[PRODUCT BULLETIN 3" AND 4" MONITOR FLANGE CONNECTION CHANGE \(PDF\)](#)

[PRODUCT BULLETIN MANUAL EXTEND-A-GUN WITH CROSSFIRE® INLET MOUNT \(PDF\)](#)

[PRODUCT BULLETIN PORTABLE MONITOR STORAGE BRACKET LABEL CHANGE \(PDF\)](#)

Certifications & Approvals

[CROSSFIRE WITH STOW-A-WAY BASE EN15767-1 \(PDF\)](#)

ABOUT THE CROSSFIRE SERIES

The CROSSFIRE monitor is a unique master stream appliance that's lightweight, compact and incredibly versatile. It can be connected to either a portable base or a truck.

With a flow rating of 1250 gpm in portable operation, the TFT Crossfire monitor integrates the exclusive Safe-Tak safety shutoff system to prevent unintentional movement. The monitor's compact and lightweight design includes stainless spring steel legs with carbide tips for maximum stability, and a visual attachment indicator for additional security.

Connect to a truck with the adapters or a TFT Extend-A-Gun with XL outlet. The connection is easy, positive, and visually verified. When in use, the release is "locked out" by water pressure. The waterway is a large 3.25" (83mm) which lets the CROSSFIRE deliver up to 1250 gpm (4500 l/min) with low friction loss.