

QUIC-TOTE HOSE PACK

Hose Packing Instructions

1. Place the vinyl tote (model QTC) inside of the aluminum packing box (model QT-PB) (see Figure 1).
2. Unzip and open the vinyl tote so that it lays over the packing box (see Figure 2).
3. Connect the 2 hoses (model ZH-150) and place into the tote (see Figure 3).
4. Fold each side of hose so that it is uniform (see Figure 4).
5. Repeat the same packing process for the second layer (see Figure 5).
6. Fold tote back over the folded hose and zip close (see Figure 6).
7. Store with or without aluminum packing box.

**FIGURE 1****FIGURE 2****FIGURE 3**

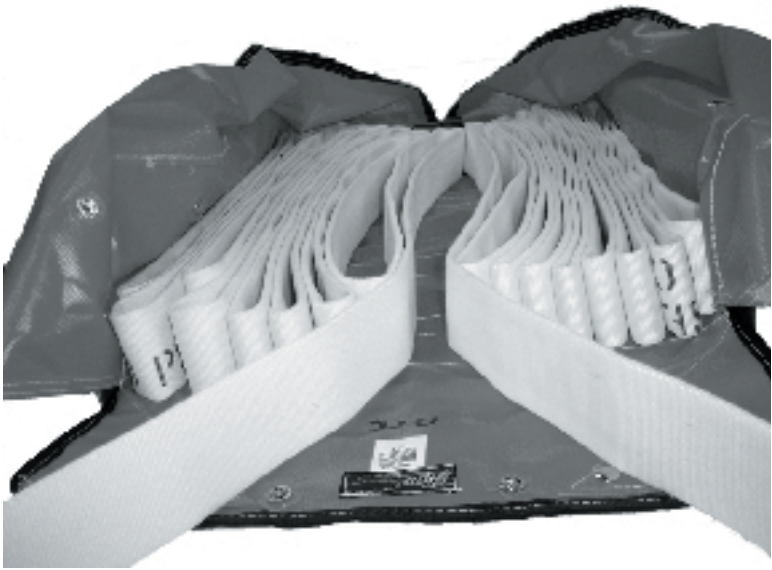


FIGURE 4

MODEL	DESCRIPTION	WT./@ IN LBS.
QTC	Container Only	3.5
GW	Gated Wye 2-1/2" x Two 1-1/2"	4.0
ZH-150	150' Single Jacket Hose (2-75' Lengths)	29.6
TCH	Container with Hose	33.1
TCHN	Container, Hose & Nozzle	38.5
TCHNW	Complete Unit with QT-PB	43.9
QT-PB	Aluminum Packing Box	6.0



FIGURE 5



FIGURE 6



Ziamatic Corp.

10 West College Avenue, P.O. Box 337, Yardley, PA 19067-0587 • (215) 493-3618 • FAX: (215) 493-1401

*ZICO is a registered trademark for fire, safety and marine products made by Ziamatic Corp.

www.ziamatic.com

TOLL FREE: 800-711-3473

Copyright Ziamatic Corp. 6-06